

L.L.Bean

Platform Bed

Thank you for purchasing our **Platform Bed**. Assembly of this product requires Phillips and flat head screwdrivers. **We have found it helpful to have a second person present in at least one step of the assembly.**

PARTS


STEP 1

Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when first assembling this product.

STEP 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non-abrasive surface (like the carton or carpet) to prevent damage to the finish.

STEP 3 Identify and count hardware using diagram at right.

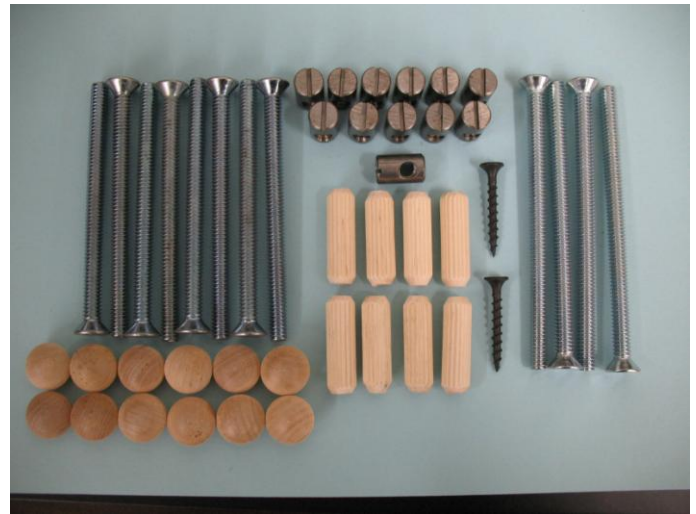

STEP 4 Identify all parts using diagram at right

Assembly of this product requires a Phillips head and a flat head screwdriver. **We have found it helpful to have a second person present in at least one step of the assembly.**

STEP 5

Locate the headboard panel, headboard brace, and the two headboard posts. The headboard panel will have two holes drilled on one side; this side is the back and the holes are located at the top. The headboard brace will have two holes drilled on one side; this side is the back and the holes are located at the top.



STEP 6

Place the headboard panel and headboard brace front side down on a flat, solid, protected surface. Position the headboard posts on either side of the headboard panel and brace making sure to position the side of the headboard post with the 4 holes to face the headboard panel and brace; the side of the headboard post with the two smaller holes and a wood button should be face down at this point



STEP 7

There are two holes drilled on each edge of the headboard panel. Place a dowel in the lower (and slightly larger) hole on each side. There are two holes drilled on each edge of the headboard brace. Place a dowel in the lower (and slightly larger) hole on each side.

STEP 8

Place a barrel nut in each of the holes on the back of the headboard panel and headboard brace so that the groove on the barrel nut is facing up and runs in the direction of the headboard panel or headboard brace.

**STEP 9**

Line up the holes in one of the headboard posts with the holes on the edge of the headboard panel. Starting from the outside of the headboard post, thread a 4" bolt through the top hole in the headboard post so that it connects with the barrel nut in the headboard panel. Using a Phillips head screwdriver, tighten until the bolt is threaded into the barrel nut, but DO NOT tighten all the way (the use of a flat head screwdriver to hold the barrel nut in the correct position is recommended). Repeat this process for the first side of the headboard brace, making sure the dowels also line up. Line up the holes on the second headboard post and repeat this process on the other side.

**STEP 10**

Once all the bolts are connected, go back and tighten all 4 bolts completely. Your headboard is now assembled.

STEP 11

Locate the two side rails, the footboard, and the headboard.

STEP 12

Stand the headboard upright.

STEP 13

Locate the eight 3/2" bolts and eight barrel nuts. Insert the barrel nuts into the holes on the inside of the side rails with the groove facing up. Turn the groove on each barrel nut so that it is running the length of the rail.



STEP 14

Line up the end of one rail (finished side out) with the pre-drilled holes in the headboard (finished side with the wood button facing towards the rail). Insert a bolt through each hole so that it screws into the barrel nut in the rail. Using a Phillips head screwdriver, tighten the bolt (the use of a flat head screwdriver to hold the barrel nut in the correct position is recommended).

**STEP 15**

Place footboard end (wood button side in) at the foot of the bed. Repeat step #14 to attach.

NOTE: Full, Queen, and King sizes – Leave the bolts loose for steps 16 and 17.

Twin side skip to step #18

STEP 16

FULL and QUEEN size: Locate the long support bar with screws attached to either end, and the small wooden leg with the 2" wooden dowels attached. Line up the dowels in the wooden leg with the pre-drilled holes in the center of the support bar. Tap into place. Line up the support bar so that the screws at either end fit into the notch on the metal brackets found on the frame ends. Push down to lock into place.

KING size: Follow Full/Queen instructions for both support bars.

**STEP 17**

Tighten all bolts

STEP 18 ALL SIZES

Locate the four 1 1/4" fluted dowels. Put one dowel into each of the pre-drilled holes located on the inside edges of the rails. Tap into place. Unroll the webbed slat system into the frame. The dowels will hold the last slat on each end in position. Using the screws provided, secure the middle slat onto the rails through the pre-drilled holes.

STEP 19

Tap the wood buttons into place on the outside of the headboard and footboard and on the headboard posts to cover the bolt holes.

CARE

Use a clean soft cloth to dust.





www.llbean.com

Product Support 1 800 341 4341